

Multi-CD control High power CD/MP3/WMA player with RDS tuner

Operation Manual

DEH-P5800MP

Visit www.pioneer.co.uk (or www.pioneer-eur.com)
to register your product

Pioneer *sound.vision.soul*

ENGLISH

Thank you for buying this Pioneer product

Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, keep this manual in a safe place for future reference.

Connecting the Units	3
Installation	5
DIN Front/Rear-mount	5
DIN Front-mount	5
• Installation with the rubber bush	5
• Removing the Unit	5
DIN Rear-mount	5
• Installation using the screw holes on the side of the unit	5
Fixing the front panel	6
Before You Start	7
About this unit	7
About this manual	7
About the illumination color	7
In case of trouble	7
Features	7
About MP3	8
About WMA	8
Visit our website	8
Use and care of the remote control	8
• Installing the battery	8
• Using the remote control	8
Protecting your unit from theft	9
• Removing the front panel	9
• Attaching the front panel	9
What's What	9
Head unit	9
Remote control	10
Power ON/OFF	10
Turning the unit on	10
Selecting a source	10
Turning the unit off	10
Tuner	11
Listening to the radio	11
Introduction of advanced tuner operation	11
Storing and recalling broadcast frequencies	11
Tuning in strong signals	12
Storing the strongest broadcast frequencies	12
RDS	12
Introduction of RDS operation	12
Switching the RDS display	12
Selecting alternative frequencies	13
• Using PI Seek	13
• Using Auto PI Seek for preset stations	13
• Limiting stations to regional programming	13
Receiving traffic announcements	13
Using news program interruption	14
Receiving PTY alarm broadcasts	14
PTY list	14
Built-in CD Player	15
Playing a CD	15
Introduction of advanced built-in CD player operation	15
Repeating play	15
Playing tracks in random order	16
Scanning tracks of a CD	16
Pausing CD playback	16
Using compression and BMX	16
Selecting the search method	16
Searching every 10 tracks in the current disc	17
Using disc title functions	17
• Entering disc titles	17
• Displaying disc titles	17
Using CD TEXT functions	17
• Displaying text information on CD TEXT discs	17
• Scrolling text information in the display	17

MP3/WMA/WAV Player	18
Playing MP3/WMA/WAV	18
Introduction of advanced built-in CD player (MP3/WMA/WAV) operation	19
Repeating play	19
Playing tracks in random order	19
Scanning folders and tracks	19
Pausing MP3/WMA/WAV playback	20
Selecting the search method	20
Searching every 10 tracks in the current folder	20
Using compression and BMX	20
Displaying text information on MP3/WMA disc	20
Displaying text information on WAV disc	21
Scrolling text information in the display	21
Multi-CD Player	21
Playing a CD	21
50-disc multi-CD player	21
Introduction of advanced multi-CD player operation	22
Repeating play	22
Playing tracks in random order	22
Scanning CDs and tracks	22
Pausing CD playback	23
Using ITS playlists	23
• Creating a playlist with ITS programming	23
• Playback from your ITS playlist	23
• Erasing a track from your ITS playlist	23
• Erasing a CD from your ITS playlist	24
Using disc title functions	24
• Entering disc titles	24
• Displaying disc titles	24
Using CD TEXT functions	24
• Displaying text information on CD TEXT discs	24
• Scrolling text information in the display	25
Using compression and bass emphasis	25
Audio Adjustments	25
Introduction of audio adjustments	25
Compensating for equalizer curves (EQ-EX)	26
Using balance adjustment	26
Using the equalizer	26
• Recalling equalizer curves	26
• Adjusting equalizer curves	26
• Fine-adjusting equalizer curve	27
Adjusting bass and treble	27
• Adjusting bass and treble level	27
• Selecting bass frequency	27
• Selecting treble frequency	27
Adjusting loudness	28
Using subwoofer output	28
• Turning a subwoofer on/off	28
• Adjusting subwoofer settings	28
Using nonfading output	28
• Adjusting nonfading output level	29
Using the high pass filter	29
Adjusting source levels	29
Initial Settings	30
Adjusting initial settings	30
Setting the FM tuning step	30
Switching Auto PI Seek	30
Switching the warning tone	30
Switching the auxiliary setting	30
Setting the rear output and subwoofer controller	31
Other Functions	31
Switching the display illumination	31
Switching the button illumination	31
Using the AUX source	32
• Selecting AUX as the source	32
• Setting the AUX title	32
Additional Information	32
Understanding built-in CD player error messages	32
Sound muting	32
CD player and care	32
CD-R/CD-RW discs	33
MP3, WMA and WAV files	33
• MP3 additional information	34
• WMA additional information	34
About folders and MP3/WMA/ WAV files	34
Terms	35
Specifications	36

Connecting the Units

Notes

- This unit is for vehicles with a 12-volt battery and negative grounding. Before installing it in a recreational vehicle, truck, or bus, check the battery voltage.
- To avoid shorts in the electrical system, be sure to disconnect the \ominus battery cable before beginning installation.
- Refer to the owner's manual for details on connecting the power amp and other units, then make connections correctly.
- Secure the wiring with cable clamps or adhesive tape. To protect the wiring, wrap adhesive tape around them where they lie against metal parts.
- Route and secure all wiring so it cannot touch any moving parts, such as the gear shift, handbrake and seat rails. Do not route wiring in places that get hot, such as near the heater outlet. If the insulation of the wiring melts or gets torn, there is a danger of the wiring short-circuiting to the vehicle body.
- Don't pass the yellow lead through a hole into the engine compartment to connect to the battery. This will damage the lead insulation and cause a very dangerous short.
- Do not shorten any leads. If you do, the protection circuit may fail to work when it should.
- Never feed power to other equipment by cutting the insulation of the power supply lead of the unit and tapping into the lead. The current capacity of the lead will be exceeded, causing overheating.
- When replacing the fuse, be sure to only use a fuse of the rating prescribed on this product.
- Since a unique BPTL circuit is employed, never wire so the speaker leads are directly grounded or the left and right \ominus speaker leads are common.
- Speakers connected to this unit must be highpower with minimum rating of 50 W and impedance of 4 to 8 ohms. Connecting speakers with output and/or impedance values other than those noted here may result in the speakers catching fire, emitting smoke or becoming damaged.
- When this product's source is switched ON, a control signal is output through the blue/white lead. Connect to an external power amp's system remote control or the car's Auto-antenna relay control terminal (max. 300 mA 12 V DC). If the car features a glass antenna, connect to the antenna booster power supply terminal.

- When an external power amp is being used with this system, be sure not to connect the blue/white lead to the amp's power terminal. Likewise, do not connect the blue/white lead to the power terminal of the auto-antenna. Such connection could cause excessive current drain and malfunction.
- To avoid a short-circuit, cover the disconnected lead with insulating tape. Insulate the unused speaker leads without fail. There is a possibility of a short-circuit if the leads are not insulated.
- To prevent incorrect connection, the input side of the IP-BUS connector is blue, and the output side is black. Connect the connectors of the same colors correctly.
- If this unit is installed in a vehicle that does not have an ACC (accessory) position on the ignition switch, the red lead of the unit should be connected to a terminal coupled with ignition switch ON/OFF operations. If this is not done, the vehicle battery may be drained when you are away from the vehicle for several hours.



ACC position




No ACC position

- The black lead is ground. Please ground this lead separately from the ground of high-current products such as power amps. If you ground the products together and the ground becomes detached, there is a risk of damage to the products or fire.

- Cords for this product and those for other products may be different colors even if they have the same function. When connecting this product to another product, refer to the supplied manuals of both products and connect cords that have the same function.

Note
Depending on the kind of vehicle, the function of 3* and 5* may be different. In this case, be sure to connect 2* to 5* and 4* to 3*.

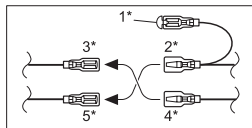

Connect leads of the same color to each other.

Cap (1*)
When not using this terminal, do not remove the cap.

Yellow (3*)
Back-up (or accessory)

Yellow (2*)
To terminal always supplied with power regardless of ignition switch position.

Red (5*)
Accessory (or back-up)


Red (4*)
To electric terminal controlled by ignition switch (12 V DC) ON/OFF.

Black (ground)
To vehicle (metal) body.

ISO connector

Note
In some vehicles, the ISO connector may be divided into two. In this case, be sure to connect to both connectors.

Yellow/black
If you use a cellular telephone, connect it via the Audio Mute lead on the cellular telephone. If not, keep the Audio Mute lead free of any connections.

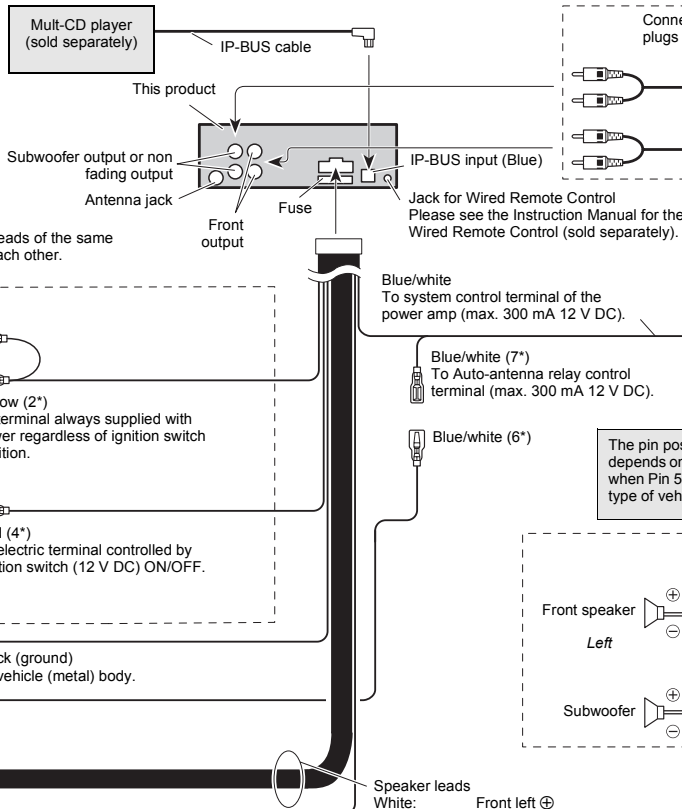

Speaker leads
White: Front left ⊕
White/black: Front left ⊖
Gray: Front right ⊕
Gray/black: Front right ⊖
Green: Rear left ⊕ or Subwoofer ⊕
Green/black: Rear left ⊖ or Subwoofer ⊖
Violet: Rear right ⊕ or Subwoofer ⊕
Violet/black: Rear right ⊖ or Subwoofer ⊖

Connecting cords with RCA pin plugs (sold separately)

Power amp (sold separately)

Power amp (sold separately)


Blue/white
To system control terminal of the power amp (max. 300 mA 12 V DC).

Blue/white (7*)
To Auto-antenna relay control terminal (max. 300 mA 12 V DC).

Blue/white (6*)

The pin position of the ISO connector will differ depends on the type of vehicle. Connect 6* and 7* when Pin 5 is an antenna control type. In another type of vehicle, never connect 6* and 7*.

System remote control

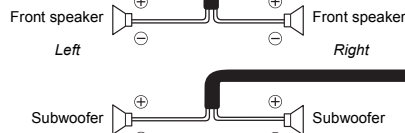


Perform these connections when using the optional amplifier.

Note
Change the initial setting of this unit (refer to the Operation Manual). The subwoofer output of this unit is monaural.

Installation

Notes

- Before making a final installation of the unit, temporarily connect the wiring to confirm that the connections are correct and the system works properly.
- Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.
- Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.
- The semiconductor laser will be damaged if it overheats, so don't install the unit anywhere hot – for instance, near a heater outlet.
- If installation angle exceeds 60° from horizontal, the unit might not give its optimum performance.

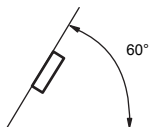


DIN Front/Rear-mount

This unit can be properly installed either from "Front" (conventional DIN Front-mount) or "Rear" (DIN Rear-mount installation, utilizing threaded screw holes at the sides of unit chassis). For details, refer to the following illustrated installation methods.

DIN Front-mount


Installation with the rubber bush

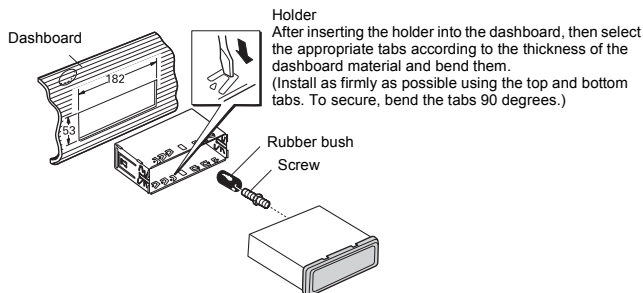

Removing the Unit

To remove the frame, extend top and bottom of the frame outwards in order to unlock it. (When reattaching the frame, point the side with a groove downwards and attach it.)

- It becomes easy to remove the frame if the front panel is released.

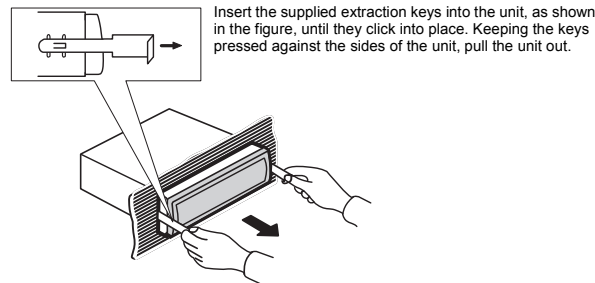

DIN Rear-mount


Installation using the screw holes on the side of the unit

1. Remove the frame.


To remove the frame, extend top and bottom of the frame outwards in order to unlock it. (When reattaching the frame, point the side with a groove downwards and attach it.)

- It becomes easy to remove the frame if the front panel is released.


2. Fastening the unit to the factory radio mounting bracket.

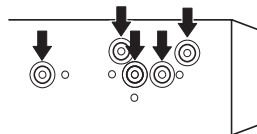


Select a position where the screw holes of the bracket and the screw holes of the head unit become aligned (are fitted) and tighten the screws at 2 places on each side. Use either truss screws (5 x 8 mm) or flush surface screws (5 x 9 mm), depending on the shape of the screw holes in the bracket.

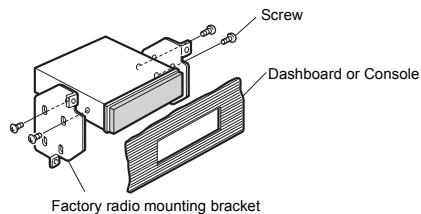


2. Replace the front panel to the unit.

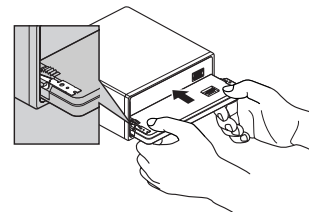

3. Flip the holders into upright positions.

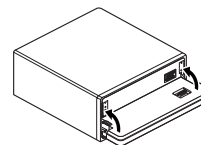


4. Fix the front panel to the unit using fixing screws.

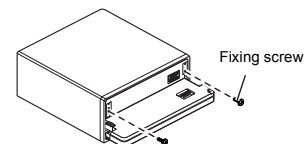

Fixing the front panel

If you do not operate the Removing and Attaching the Front Panel Function, use the supplied fixing screws and fix the front panel to this unit.

1. Attach the holders to both sides of the front panel.

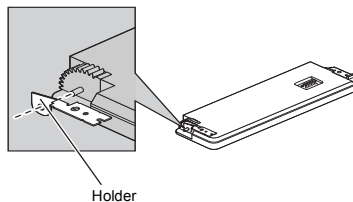

Before You Start



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the 25 member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For countries not mentioned above, please contact your local authorities for the correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

About this unit

The tuner frequencies on this unit are allocated for use in Western Europe, Asia, the Middle East, Africa and Oceania. Use in other areas may result in poor reception. The RDS (radio data system) function operates only in areas with FM stations broadcasting RDS signals.

⚠ CAUTION

Do not allow this unit to come into contact with liquids. Electrical shock could result. Also, this unit damage, smoke, and overheat could result from contact with liquids.

- This product contains a laser diode of higher class than 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

A **CLASS 1 LASER PRODUCT** label is affixed to the bottom of this unit.

- The Pioneer CarStereo-Pass is for use only in Germany.
- Keep this manual handy as a reference for operating procedures and precautions.
- Always keep the volume low enough so that you can hear sounds from outside the vehicle.
- Protect this unit from moisture.
- If the battery is disconnected or discharged, the preset memory will be erased and must be reprogrammed.



About this manual

This unit features a number of sophisticated functions ensuring superior reception and operation. All the functions have been designed for the easiest possible use, but many are not self-explanatory. This operation manual will help you benefit fully from this unit's potential and to maximize your listening enjoyment.

We recommend that you familiarize yourself with the functions and their operation by reading through the manual before you begin using this unit. It is especially important that you read and observe **WARNINGS** and **CAUTIONS** in this manual.

About the illumination color

This unit features multi-color illumination.

When the unit is turned on, the buttons and display illuminate in rainbow colors. To select a particular illumination color, see "Switching the display illumination" on page 31.

In case of trouble

Should this product fail to operate properly, contact your dealer or nearest authorized Pioneer Service Station.

Features

CD playback

Music CD/CD-R/CD-RW playback is possible.

MP3 file playback

You can play back MP3 files recorded on CD-ROM/CD-R/CD-RW (ISO9660 Level 1/ Level 2 standard recordings).

WMA file playback

You can play back WMA files recorded on CD-ROM/CD-R/CD-RW (ISO9660 Level 1/ Level 2 standard recordings).

WAV file playback

You can play back WAV files recorded on CD-ROM/CD-R/CD-RW (Linear PCM (LPCM)/MS ADPCM recordings).

About MP3

Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>.

About WMA

The Windows Media™ logo printed on the box indicates that this unit can play back WMA data.

WMA is short for Windows Media™ Audio and refers to an audio compression technology that is developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player version 7 or later.

Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Notes

- This unit may not operate correctly depending on the application used to encode WMA files.
- Depending on the version of Windows Media Player used to encode WMA files, album names and other text information may not be correctly displayed.
- There may be a slight delay when starting playback of WMA files encoded with image data.



Visit our website

Visit us at the following site:




- Register your product. We will keep the details of your purchase on file to help you refer to this information in the event of an insurance claim such as loss or theft.
- We offer the latest information about Pioneer Corporation on our website.

Use and care of the remote control

Installing the battery

Slide the tray out on the back of the remote control and insert the battery with the plus (+) and minus (-) poles pointing in the proper direction.

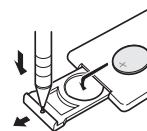

⚠ WARNING

Keep the battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.

⚠ CAUTION

- Use only one **CR2025 (3 V)** lithium battery.
- Remove the battery if the remote control is not used for a month or longer.
- Do not recharge, disassemble, heat or dispose of the battery in fire.
- Do not handle the battery with metallic tools.
- Do not store the battery with metallic materials.
- In the event of battery leakage, wipe the remote control completely clean and install a new battery.
- When disposing of used batteries, please comply with governmental regulations or environmental public institutions' rules that apply in your country/area.

Using the remote control

Point the remote control in the direction of the front panel to operate.

Important

- Do not store the remote control in high temperatures or direct sunlight.
- The remote control may not function properly in direct sunlight.
- Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal.

Before You Start

Protecting your unit from theft

The front panel can be detached from the head unit and stored in the provided protective case to prevent theft.

- If the front panel is not detached from the head unit within five seconds of turning off the ignition, a warning tone will sound.
- You can turn off the warning tone. See "Switching the warning tone" on page 30.

Important


- Never use force or grip the display and the buttons too tightly when removing or attaching.
- Avoid subjecting the front panel to excessive shocks.
- Keep the front panel out of direct sunlight and high temperatures.

Removing the front panel

1. Press **OPEN** to open the front panel.

2. Grip the left side of the front panel and pull it gently outward.


Take care not to grip it too tightly or to drop the front panel and protect it from contact with water or other fluids to prevent permanent damage.

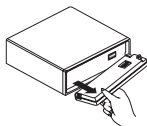

3. Put the front panel into provided protective case for safe keeping.


Attaching the front panel

- Replace the front panel by holding it upright to the unit and clipping it securely into the mounting hooks.

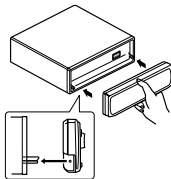

What's What

Head unit

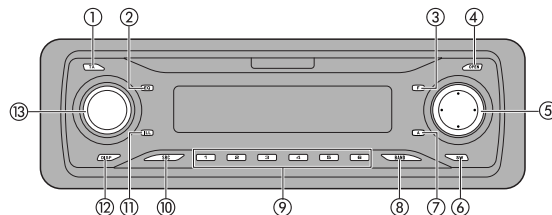

① TA button

Press to turn traffic announcements function on or off.

Press and hold to turn NEWS function on or off.

② EQ button

Press to select various equalizer curves.

③ FUNCTION button

Press to select functions.

④ OPEN button

Press to open the front panel.

⑤ ▲/▼/◀/▶ buttons

Press to perform manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.

⑥ SW button

Press to directly select subwoofer setting menu. See "Using subwoofer output" on page 28. Press and hold to select EQ-EX setting menu. See "Compensating for equalizer curves (EQ-EX)" on page 26.

⑦ AUDIO button

Press to select various sound quality controls.

⑧ BAND button

Press to select among three FM bands and MW/LW bands and to cancel the control mode of functions.

⑨ 1-6 buttons

Press for preset tuning and disc number search when using a multi-CD player.

⑩ SOURCE button

This unit is turned on by selecting a source. Press to cycle through all the available sources.

⑪ ILLUMINATION button

Press to change the button illumination and the display illumination.

⑫ DISPLAY button


Press to select different displays.

⑬ VOLUME

When you press **VOLUME**, it extends outward so that it becomes easier to turn. To retract **VOLUME**, press it again. Rotate it to increase or decrease the volume.

Remote control

Operation is the same as when using the buttons on the head unit. See the explanation of the head unit about the operation of each button with the exception of **ATT**, which is explained below.

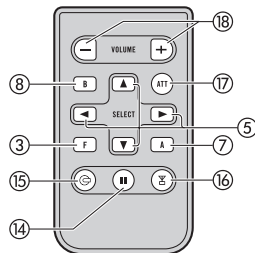

14 PAUSE button

Press to turn pause on or off.

15 CD button

Press to select the built-in or multi-CD player as the source.

16 TUNER button

Press to select the tuner as the source.

17 ATT button

Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level.

18 VOLUME button

Press to increase or decrease the volume.

Turning the unit on

● Press **SOURCE** to turn the unit on.

When you select a source, the unit is turned on.

Selecting a source

You can select a source you want to listen to. To switch to the built-in CD player, load a disc in the unit (refer to page 15).

1. When using the head unit, press **SOURCE** to select a source.

Press **SOURCE** repeatedly to switch between the following sources:

Built-in CD player – Television – Tuner – Multi-CD player – External unit 1 – External unit 2 – AUX

2. When using the remote control, press **TUNER** or **CD** to select a source.

Press each button repeatedly to switch between the following sources:

TUNER: Tuner – Television – Sources off

CD: Built-in CD player – Multi-CD player – Sources off

Notes

- In the following cases, the sound source will not change:
 - When there is no unit corresponding to the selected source connected to this unit.
 - When there is no disc in the unit.
 - When there is no magazine in the multi-CD player.
 - When the AUX (auxiliary input) is set to off (refer to page 30).
- External unit refers to a Pioneer product (such as one available in the future) that, although incompatible as a source, enables control of basic functions by this unit. Two external units can be controlled by this unit. When two external units are connected, the allocation of them to external unit 1 or external unit 2 is automatically set by this unit.
- When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off.

Turning the unit off

● Press **SOURCE** and hold until the unit turns off.

Listening to the radio

These are the basic steps necessary to operate the radio. More advanced tuner operation is explained starting on this page.

This unit's AF (alternative frequencies search) function can be turned on and off. AF should be off for normal tuning operation (refer to page 13).

① Band indicator

Shows which band the radio is tuned to, MW/LW or FM.

② Frequency indicator

 
Shows the frequency to which the tuner is tuned.

③ Stereo (◻) indicator

Shows when the selected frequency is being broadcast in stereo.

④ Preset number indicator

Shows which preset has been selected.



1. Press SOURCE to select the tuner.

Press **SOURCE** until tuner is selected as the source.

2. Use VOLUME to adjust the sound level.

Rotate it to increase or decrease the volume.

3. Press BAND to select a band.

Press **BAND** until the desired band is displayed, **F1**, **F2**, **F3** for FM or **MW/LW**.

4. To perform manual tuning, briefly press ◀ or ▶.

The frequencies move up or down step by step.

5. To perform seek tuning, press and hold ◀ or ▶ for about one second and release.

The tuner will scan the frequencies until a broadcast strong enough for good reception is found.

- You can cancel seek tuning by briefly pressing ◀ or ▶.
- If you press and hold ◀ or ▶ you can skip stations. Seek tuning starts as soon as you release the button.

Note

- When the frequency selected is being broadcast in stereo the stereo (◻) indicator will light.

Introduction of advanced tuner operation

① Function display

 
Shows the function status.

② LOC indicator

Shows when local seek tuning is on.

③ Preset number indicator

Shows which preset has been selected.



• Press FUNCTION to display the function names.

Press **FUNCTION** repeatedly to switch between the following functions:

BSM (best stations memory) – **REG** (regional) – **LOCAL** (local seek tuning) – **TA** (traffic announcement standby) – **AF** (alternative frequencies search) – **NEWS** (news program interruption)

- To return to the frequency display, press **BAND**.
- If MW/LW band is selected, you can only select **BSM** or **LOCAL**.

Note

- If you do not operate the function within about 30 seconds, the display is automatically returned to the frequency display.

Storing and recalling broadcast frequencies

If you press any of the preset tuning buttons **1–6** you can easily store up to six broadcast frequencies for later recall with the touch of a button.

• When you find a frequency that you want to store in memory, press one of preset tuning buttons **1–6** and hold until the preset number stops flashing.

The number you have pressed will flash in the preset number indicator and then remain lit. The selected radio station frequency has been stored in memory.

The next time you press the same preset tuning button the radio station frequency is recalled from memory.

Notes

- Up to 18 FM stations, six for each of the three FM bands, and six MW/LW stations can be stored in memory.
- You can also use ▲ and ▼ to recall radio station frequencies assigned to preset tuning buttons **1–6**.

Tuning in strong signals

Local seek tuning lets you tune in only those radio stations with sufficiently strong signals for good reception.

1. Press **FUNCTION** to select **LOCAL**.

Press **FUNCTION** until **LOCAL** appears in the display.

2. Press **▲** to turn local seek tuning on.

Local seek sensitivity (e.g., **LOCAL 2**) appears in the display.

3. Press **◀** or **▶** to set the sensitivity.

There are four levels of sensitivity for FM and two levels for MW/LW:

FM: **LOCAL 1 – LOCAL 2 – LOCAL 3 – LOCAL 4**

MW/LW: **LOCAL 1 – LOCAL 2**

The **LOCAL 4** setting allows reception of only the strongest stations, while lower settings let you receive progressively weaker stations.

4. When you want to return to normal seek tuning, press **▼** to turn local seek tuning off.

LOCAL:OFF appears in the display.

Storing the strongest broadcast frequencies

BSM (best stations memory) lets you automatically store the six strongest broadcast frequencies under preset tuning buttons **1–6**. Once stored you can tune in to those frequencies with the touch of button.

1. Press **FUNCTION** to select **BSM**.

Press **FUNCTION** until **BSM** appears in the display.

2. Press **▲** to turn **BSM** on.

BSM begins to flash. While **BSM** is flashing the six strongest broadcast frequencies will be stored under preset tuning buttons **1–6** in the order of their signal strength. When finished, **BSM** stops flashing.

- To cancel the storage process, press **▼**.

Note

- Storing broadcast frequencies with BSM may replace broadcast frequencies you have saved using buttons **1–6**.

Introduction of RDS operation

RDS (radio data system) is a system for providing information along with FM broadcasts. This inaudible information provides such features as program service name, program type, traffic announcement standby and automatic tuning, and is intended to aid radio listeners in finding and tuning in to a desired station.

① **TP** (📶) indicator


Shows when a TP station is tuned in.

② **News** (📰) indicator

Shows when the set news program is received.

③ **Program service name**

Shows the name of broadcast program.

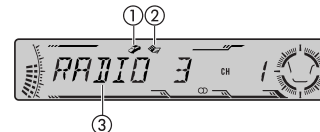

• Press **FUNCTION** to display the function names.

Press **FUNCTION** repeatedly to switch between the following functions:

BSM (best stations memory) – **REG** (regional) – **LOCAL** (local seek tuning) – **TA** (traffic announcement standby) – **AF** (alternative frequencies search) – **NEWS** (news program interruption)

- To return to the frequency display, press **BAND**.
- If MW/LW band is selected, you can only select **BSM** or **LOCAL**.

Notes

- If you do not operate the function within about 30 seconds, the display is automatically returned to the frequency display.
- RDS service may not be provided by all stations.
- RDS functions such as AF and TA are only active when your radio is tuned to an RDS station.

Switching the RDS display

When you tune in an RDS station its program service name is displayed. Switch the display to find out the frequency.

• Press **DISPLAY**.

Press **DISPLAY** repeatedly to switch between the following settings:

Program service name – PTY information – Frequency

PTY (program type ID code) information is listed on page 14.

- PTY information and the frequency of the current station appears on the display for eight seconds.
- If a PTY code of zero is received from a station or the signal is too weak for this unit to pick up the PTY code, you cannot switch to PTY information display.

Selecting alternative frequencies

If you are listening to a broadcast and the reception becomes weak or there are other problems, the unit will automatically search for a different station in the same network which is broadcasting a stronger signal.

- The default setting for AF is off.

1. Press **FUNCTION** to select **AF**.

Press **FUNCTION** until **AF** appears in the display.

2. Press **▲** to turn **AF** on.

Press **▲** and **AF :ON** is displayed.

3. Press **▼** to turn **AF** off.

Press **▼** and **AF :OFF** is displayed.

Notes

- Only RDS stations are tuned in during seek tuning or BSM when AF is on.
- When you recall a preset station, the tuner may update the preset station with a new frequency from the station's AF list. (This is only available when using presets on the **F1** or **F2** bands.) No preset number appears on the display if the RDS data for the station received differs from that for the originally stored station.
- Sound may be temporarily interrupted by another program during an AF frequency search.
- AF can be turned on or off independently for each FM band.

Using PI Seek

If the unit fails to find a suitable alternative frequency, or if you are listening to a broadcast and the reception becomes weak, the unit will automatically search for a different station with the same programming. During the search, **PI SEEK** is displayed and the output is muted. The muting is discontinued after completion of the PI Seek, whether or not a different station is found.

Using Auto PI Seek for preset stations

When preset stations cannot be recalled, as when travelling long distances, the unit can be set to perform PI Seek during preset recall.

- The default setting for Auto PI Seek is off. See "Switching Auto PI Seek" on page 30.

Limiting stations to regional programming

When AF is used to automatically retune frequencies, the regional function limits the selection to stations broadcasting regional programs.

1. Press **FUNCTION** to select **REG**.

Press **FUNCTION** until **REG** appears in the display.

2. Press **▲** to turn the regional function on.

Press **▲** and **REG :ON** is displayed.

3. Press **▼** to turn the regional function off.

Press **▼** and **REG :OFF** is displayed.


Notes

- Regional programming and regional networks are organized differently depending on the country (i.e., they may change according to the hour, state or broadcast area).
- The preset number may disappear on the display if the tuner tunes in a regional station which differs from the originally set station.
- The regional function can be turned on or off independently for each FM band.

Receiving traffic announcements

TA (traffic announcement standby) lets you receive traffic announcements automatically, no matter what source you are listening to. TA can be activated for both a TP station (a station that broadcasts traffic information) or an enhanced other network's TP station (a station carrying information which cross-references TP stations).

1. Tune in a TP or enhanced other network's TP station.

When you are tuned into a TP or enhanced other network's TP station the TP  indicator will light.

2. Press **TA** to turn traffic announcement standby on.

Press **TA** and **TA ON** appears in the display. The tuner will stand-by for traffic announcements.

- To turn traffic announcements standby off, press **TA** again.

3. Use **VOLUME** to adjust the TA volume when a traffic announcement begins.

Rotate it to increase or decrease the volume.

The newly set volume is stored in memory and recalled for subsequent traffic announcements.

4. Press **TA** while a traffic announcement is being received to cancel the announcement.

The tuner returns to the original source but remains in the standby mode until **TA** is pressed again.

- You can also cancel the announcement by pressing **SOURCE**, **BAND**, **▲**, **▼**, **◀** or **▶** while a traffic announcement is being received.

Notes

- You can also turn the TA function on or off in the menu that appears with the pressing of **FUNCTION**.
- The system switches back to the original source following traffic announcement reception.
- Only TP and enhanced other network's TP stations are tuned in during seek tuning or BSM when TA is on.

Using news program interruption

When a news program is broadcast from a PTY code news station, the unit can switch from any station to the news broadcast station. When the news program ends, reception of the previous program resumes.

● Press **TA** and hold to turn on news program interruption.

Press **TA** until **NEWS ON** appears in the display.

- To turn off news program interruption, press **TA** and hold until **NEWS OFF** appears in the display.
- A news program can be canceled by pressing **TA**.
- You can also cancel the news program by pressing **SOURCE**, **BAND**, **▲**, **▼**, **◀** or **▶** while a news program is being received.

Note

- You can also turn on or off news program in the menu that appears with the pressing of **FUNCTION**.

Receiving PTY alarm broadcasts

PTY alarm is a special PTY code for announcements regarding emergencies such as natural disasters. When the tuner receives the radio alarm code, **ALARM** appears on the display and the volume adjusts to the TA volume. When the station stops broadcasting the emergency announcement, the system returns to the previous source.

- An emergency announcement can be canceled by pressing **TA**.
- You can also cancel an emergency announcement by pressing **SOURCE**, **BAND**, **▲**, **▼**, **◀** or **▶**.

PTY list

Specific	Type of program
NEWS	News
AFFAIRS	Current affairs
INFO	General information and advice
SPORT	Sports
WEATHER	Weather reports/meteorological information
FINANCE	Stock market reports, commerce, trading, etc.
POP MUS	Popular music
ROCK MUS	Contemporary modern music
EASY MUS	Easy listening music
OTH MUS	Non-categorized music
JAZZ	Jazz
COUNTRY	Country music
NAT MUS	National music
OLDIES	Oldies, golden oldies
FOLK MUS	Folk music
L. CLASS	Light classical music
CLASSIC	Classical music
EDUCATE	Educational programs
DRAMA	Radio plays and serials
CULTURE	National or regional culture
SCIENCE	Nature, science and technology
VARIED	Light entertainment
CHILDREN	Children's
SOCIAL	Social affairs
RELIGION	Religious affairs or services
PHONE IN	Phone in
TOURING	Travel programs; not for traffic announcements
LEISURE	Hobbies and recreational activities
DOCUMENT	Documentaries

Built-in CD Player

Playing a CD

These are the basic steps necessary to play a CD with your built-in CD player. More advanced CD operation is explained starting on this page.

① Play time indicator

Shows the elapsed playing time of the current track.

② Track number indicator

Shows the track currently playing.



1. Press **OPEN** to open the front panel.

CD loading slot appears.

- After a CD has been inserted, press **SOURCE** to select the built-in CD player.

2. Insert a CD into the CD loading slot.

Playback will automatically start.

- You can eject a CD by pressing **EJECT**.
- To avoid a malfunction, make sure that no metal object comes into contact with the terminals when the front panel is open.

CD loading slot



EJECT button

3. Close the front panel.

4. Use **VOLUME** to adjust the sound level.

Rotate it to increase or decrease the volume.

5. To perform fast forward or reverse, press and hold ◀ or ▶.

- If you select **ROUGH**, pressing and holding ◀ or ▶ enables you to search every 10 tracks in the current disc. (Refer to "Selecting the search method" on page 16.)

6. To skip back or forward to another track, press ◀ or ▶.

Pressing ▶ skips to the start of the next track. Pressing ◀ once skips to the start of the current track. Pressing again will skip to the previous track.

Notes

- The built-in CD player plays one standard, 12-cm or 8-cm CD at a time. Do not use an adapter when playing 8-cm CDs.
- Do not insert anything other than a CD into the CD loading slot.
- If you cannot insert a disc completely or if after you insert a disc the disc does not play, check that the label side of the disc is up. Press **EJECT** to eject the disc, and check the disc for damage before inserting it again.
- If an error message such as **ERROR-11** is displayed, refer to "Understanding built-in CD player error messages" on page 32.
- When a CD TEXT disc is inserted, the disc and track titles begin to scroll to the left automatically.

Introduction of advanced built-in CD player operation

① Function display

Shows the function status.

② RPT indicator

Shows when repeat play is turned on.



• Press **FUNCTION** to display the function names.

Press **FUNCTION** repeatedly to switch between the following functions:

RPT (repeat play) – **RDM** (random play) – **SCAN** (scan play) – **PAUSE** (pause) – **COMP** (compression and BMX) – **FF/REV** (search method)

- To return to the playback display, press **BAND**.

Note

- If you do not operate the function within about 30 seconds, the display is automatically returned to the playback display.

Repeating play

Repeat play lets you hear the same track or disc over again.

1. Press **FUNCTION** to select **RPT**.

Press **FUNCTION** until **RPT** appears in the display.

2. Press ◀ or ▶ to select the repeat range.

This switches you to the selected setting.

- **RPT:DSC** – Repeat the current disc
- **RPT:TRK** – Repeat just the current track

Note

- If you perform track search or fast forward/reverse during **TRK**, the repeat play range changes to **DSC**.

Built-in CD Player

Playing tracks in random order

Random play lets you play back tracks on the CD in a random order.

1. Press FUNCTION to select RDM.

Press **FUNCTION** until **RDM** appears in the display.

2. Press ▲ to turn random play on.

RDM :ON appears in the display. Tracks will play in a random order.

3. Press ▼ to turn random play off.

RDM :OFF appears in the display. Tracks will continue to play in order.

Scanning tracks of a CD

Scan play lets you hear the first 10 seconds of each track on the CD.

1. Press FUNCTION to select SCAN.

Press **FUNCTION** until **SCAN** appears in the display.

2. Press ▲ to turn scan play on.

SCAN :ON appears in the display. The first 10 seconds of each track is played.

3. When you find the desired track press ▼ to turn scan play off.

SCAN :OFF appears in the display. The track will continue to play.

- If the display has automatically returned to the playback display, select **SCAN** again by pressing **FUNCTION**.

Note

- After scanning of a CD is finished, normal playback of the tracks will begin again.

Pausing CD playback

Pause lets you temporarily stop playback of the CD.

1. Press FUNCTION to select PAUSE.

Press **FUNCTION** until **PAUSE** appears in the display.

2. Press ▲ to turn pause on.

PAUSE:ON appears in the display. Play of the current track pauses.

3. Press ▼ to turn pause off.

PAUSE:OFF appears in the display. Play will resume at the same point that you turned pause on.

Note

- You can also turn pause on or off by pressing **PAUSE**.

Using compression and BMX

Using the **COMP** (compression) and **BMX** functions let you adjust the sound playback quality of this player. Each of the functions has a two-step adjustment. The **COMP** function balances the output of louder and softer sounds at higher volumes. **BMX** controls sound reverberations to give playback a fuller sound. Listen to each of the effects as you select through them and use the one that best enhances the playback of the track or CD that you are listening to.

1. Press FUNCTION to select COMP.

Press **FUNCTION** until **COMP** appears in the display.

2. Press ▲ or ▼ to select your favorite setting.

Press **▲** or **▼** repeatedly to switch between the following settings:

COMP OFF – COMP 1 – COMP 2 – COMP OFF – BMX 1 – BMX 2

Selecting the search method

You can switch the search method between fast forward/reverse and searching every 10 tracks.

1. Press FUNCTION to select FF/REV.

Press **FUNCTION** until **FF/REV** appears in the display.

- If the search method **ROUGH** has been previously selected, **ROUGH** will be displayed.

2. Press ◀ or ▶ to select the search method.

Press **◀** or **▶** until the desired search method appears in the display.

- **FF/REV** – Fast forward and reverse
- **ROUGH** – Searching every 10 tracks

Searching every 10 tracks in the current disc

If a disc contains over 10 tracks, you can search every 10 tracks. When a disc contains many tracks, you can roughly search for the track you want to play.

1. Select the search method **ROUGH**.

Refer to "Selecting the search method" on page 16.

2. Press and hold **◀** or **▶** to search every 10 tracks on a disc.

- If a disc contains less than 10 tracks, pressing and holding **▶** recalls the last track of the disc. Also, if the remaining number of tracks after searching every 10 tracks is less than 10, pressing and holding **▶** recalls the last track of the disc.
- If a disc contains less than 10 tracks, pressing and holding **◀** recalls the first track of the disc. Also, if the remaining number of tracks after searching every 10 tracks is less than 10, pressing and holding **◀** recalls the first track of the disc.

Using disc title functions

You can input CD titles and display the title. The next time you insert a CD for which you have entered a title, the title of that CD will be displayed.

Entering disc titles

Use the disc title input feature to store up to 48 CD titles in the unit. Each title can be up to 8 characters long.

1. Play the CD that you want to enter a title for.

2. Press **FUNCTION** and hold until **TITLE IN** appears in the display.

- When playing a CD TEXT disc, you cannot switch to **TITLE IN**. The disc title will have already been recorded on a CD TEXT disc.

3. Press **▲** or **▼** to select a letter of the alphabet.

Each press of **▲** will display a letter of the alphabet in **A B C ... X Y Z**, numbers and symbols in **1 2 3 ... > []** order. Each press of **▼** will display a letter in the reverse order, such as **Z Y X ... C B A** order.



4. Press **▶** to move the cursor to the next character position.

When the letter you want is displayed, press **▶** to move the cursor to the next position and then select the next letter. Press **◀** to move backwards in the display.

5. Move the cursor to the last position by pressing **▶** after entering the title.

When you press **▶** one more time, the entered title is stored in memory.

6. Press **BAND** to return to the playback display.

Notes

- Titles remain in memory, even after the disc has been removed from the unit, and are recalled when the disc is reinserted.
- After data for 48 discs has been stored in memory, data for a new disc will overwrite the oldest one.
- If you connect a multi-CD player, you can input disc titles for up to 100 discs.

Displaying disc titles

You can display the text information of any disc that has had a disc title entered.

• Press **DISPLAY**.

Press **DISPLAY** repeatedly to switch between the following settings:

Play time – **DISC TTL** (disc title)

When you select **DISC TTL**, the title of the currently playing disc is shown in the display.

- If no title has been entered for the currently playing disc, **NO D-TTL** is displayed.

Using CD TEXT functions

Some discs have certain information encoded on the disc during manufacture. These discs may contain such information as the CD title, track title, artist's name and playback time and are called CD TEXT discs. Only these specially encoded CD TEXT discs support the functions listed below.

Displaying text information on CD TEXT discs

• Press **DISPLAY**.

Press **DISPLAY** repeatedly to switch between the following settings:

Play time – **DISC TTL** (disc title) – **ART NAME** (disc artist name) – **TRK TTL** (track title) – **ART NAME** (track artist name)

- If specific information has not been recorded on a CD TEXT disc, **NO XXXX** will be displayed (e.g., **NO T-TTL**).

Scrolling text information in the display

This unit can display the first 8 letters only of **DISC TTL**, **ART NAME**, **TRK TTL** and **ART NAME**. When the recorded information is longer than 8 letters, you can scroll the text to the left so that the rest of the title can be seen.

• Press **DISPLAY** and hold until the title begins to scroll to the left.

The rest of the title will appear in the display.

Playing MP3/WMA/WAV

These are the basic steps necessary to play an MP3/WMA/WAV with your built-in CD player. More advanced MP3/WMA/WAV operation is explained starting on page 19.

① MP3 indicator

Shows when an MP3 file is playing.

② WMA indicator

Shows when a WMA file is playing.

③ Track number indicator

Shows the track (file) currently playing.


- If a track number 100 to 199 is selected, ► on the left of the track number indicator will light.
- If a track number 200 or more is selected, ► on the left of the track number indicator will blink.

④ Play time indicator

Shows the elapsed playing time of the current track (file).

⑤ Folder number indicator

Shows the number of folder currently playing.

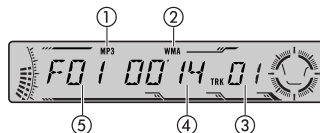

1. Press OPEN to open the front panel.

CD loading slot appears.

 
- After a CD-ROM has been inserted, press **SOURCE** to select the built-in CD player.

2. Insert a CD-ROM into the CD loading slot.

Playback will automatically start.

- You can eject a CD-ROM by pressing **EJECT**.
- To avoid a malfunction, make sure that no metal object comes into contact with the terminals when the front panel is open.

CD loading slot



EJECT button

3. Close the front panel.

4. Use VOLUME to adjust the sound level.

Rotate it to increase or decrease the volume.

5. Press ▲ or ▼ to select a folder.

- You cannot select a folder that does not have an MP3/WMA/WAV file recorded in it.
- To return to folder 01 (ROOT), press and hold **BAND**. However, if folder 01 (ROOT) contains no files, playback commences with folder 02.

6. To perform fast forward or reverse, press and hold ◀ or ▶.

- This is fast forward and reverse operation only for the file being played. This operation is canceled when the previous or next file is reached.
- If you select **ROUGH**, pressing and holding ◀ or ▶ enables you to search every 10 tracks in the current folder. (Refer to "Selecting the search method" on page 20.)

7. To skip back or forward to another track, press ◀ or ▶.

Pressing ▶ skips to the start of the next track. Pressing ◀ once skips to the start of the current track. Pressing again will skip to the previous track.

 
Notes

- When playing discs with MP3/WMA/WAV files and audio data (CD-DA) such as CD-EXTRA and MIXED-MODE CDs, both types can be played only by switching mode between MP3/WMA/WAV and CD-DA with **BAND**.
- If you have switched between playback of MP3/WMA/WAV files and audio data (CD-DA), playback starts at the first track on the disc.
- The built-in CD player can play back an MP3/WMA/WAV file recorded on CD-ROM. (Refer to page 33 for files that can be played back.)
- Do not insert anything other than a CD into the CD loading slot.
- There is sometimes a delay between starting up CD playback and the sound being issued. When being read, **FRMTREAD** is displayed.
- If you cannot insert a disc completely or if after you insert a disc the disc does not play, check that the label side of the disc is up. Press **EJECT** to eject the disc, and check the disc for damage before inserting it again.
- Playback is carried out in order of file number. Folders are skipped if they contain no files. (If folder 01 (ROOT) contains no files, playback commences with folder 02.)
- When playing back files recorded as VBR (variable bit rate) files, the play time will not be correctly displayed if fast forward or reverse operations are used.
- If the inserted disc contains no files that can be played back, **NO AUDIO** is displayed.
- If the inserted disc contains WMA files that are protected by digital rights management (DRM), **SKIPPED** is displayed while the protected file is skipped.
- If all the files on the inserted disc are secured by DRM, **PROTECT** is displayed.
- There is no sound on fast forward or reverse.
- If an error message such as **ERROR-11** is displayed, refer to "Understanding built-in CD player error messages" on page 32.
- When an MP3/WMA/WAV disc is inserted, folder name and file name begin to scroll to the left automatically.

Introduction of advanced built-in CD player (MP3/WMA/WAV) operation

- ① **Function display**
Shows the function status.

- ② **RPT indicator**
Shows when repeat range is selected to current track (file).



● Press **FUNCTION** to display the function names.

Press **FUNCTION** repeatedly to switch between the following functions:

RPT (repeat play) – **RDM** (random play) – **SCAN** (scan play) – **PAUSE** (pause) – **COMP** (compression and BMX) – **FF/REV** (search method)

- To return to the playback display, press **BAND**.

Note

- If you do not operate the function within about 30 seconds, the display is automatically returned to the playback display.

Repeating play

For MP3/WMA/WAV playback, there are three repeat play ranges: **FLD** (folder repeat), **TRK** (one-track repeat) and **DSC** (repeat all tracks).

1. Press **FUNCTION** to select **RPT**.

Press **FUNCTION** until **RPT** appears in the display.

2. Press **◀** or **▶** to select the repeat range.

Press **◀** or **▶** until the desired repeat range appears in the display.

- **FLD** – Repeat the current folder
- **TRK** – Repeat just the current track
- **DSC** – Repeat all tracks

Notes

- If you select another folder during repeat play, the repeat play range changes to **DSC**.
- If you perform track search or fast forward/reverse during **TRK**, the repeat play range changes to **FLD**.
- When **FLD** is selected, it is not possible to play back a subfolder of that folder.

Playing tracks in random order

Random play lets you play back tracks in a random order within the repeat range, **FLD** and **DSC**.

1. Select the repeat range.

Refer to "Repeating play" on this page.

2. Press **FUNCTION** to select **RDM**.

Press **FUNCTION** until **RDM** appears in the display.

3. Press **▲** to turn random play on.

RDM :ON appears in the display. Tracks will play in a random order within the previously selected **FLD** or **DSC** ranges.

4. Press **▼** to turn random play off.

RDM :OFF appears in the display. Tracks will continue to play in order.

Note

- If you turn random play on during **FLD** and then return to the playback display, **FRDM** appears in the display.

Scanning folders and tracks

While you are using **FLD**, the beginning of each track in the selected folder plays for about 10 seconds. When you are using **DSC**, the beginning of the first track of each folder is played for about 10 seconds.

1. Select the repeat range.

Refer to "Repeating play" on this page.

2. Press **FUNCTION** to select **SCAN**.

Press **FUNCTION** until **SCAN** appears in the display.

3. Press **▲** to turn scan play on.

SCAN :ON appears in the display. The first 10 seconds of each track of the current folder (or the first track of each folder) is played.

4. When you find the desired track (or folder) press **▼** to turn scan play off.

SCAN :OFF appears in the display. The track (or folder) will continue to play.

- If the display has automatically returned to the playback display, select **SCAN** again by pressing **FUNCTION**.

Notes

- After track or folder scanning is finished, normal playback of the tracks will begin again.
- If you turn scan play on during **FLD** and then return to the playback display, **FSCN** appears in the display.

MP3/WMA/WAV Player

Pausing MP3/WMA/WAV playback

Pause lets you temporarily stop playback of the MP3/WMA/WAV.

1. Press **FUNCTION** to select **PAUSE**.

Press **FUNCTION** until **PAUSE** appears in the display.

2. Press **▲** to turn pause on.

PAUSE:ON appears in the display. Play of the current track pauses.

3. Press **▼** to turn pause off.

PAUSE:OFF appears in the display. Play will resume at the same point that you turned pause on.

Note

- You can also turn pause on or off by pressing **PAUSE**.

Selecting the search method

You can switch the search method between fast forward/reverse and searching every 10 tracks.

1. Press **FUNCTION** to select **FF/REV**.

Press **FUNCTION** until **FF/REV** appears in the display.

- If the search method **ROUGH** has been previously selected, **ROUGH** will be displayed.

2. Press **◀** or **▶** to select the search method.

Press **◀** or **▶** until the desired search method appears in the display.

- FF/REV** – Fast forward and reverse
- ROUGH** – Searching every 10 tracks

Searching every 10 tracks in the current folder

If the current folder contains over 10 tracks, you can search every 10 tracks. When one folder contains a lot of tracks, you can roughly search for the track you want to play.

1. Select the search method **ROUGH**.

Refer to "Selecting the search method" on this page.

2. Press and hold **◀** or **▶** to search every 10 tracks in the current folder.

- If the current folder contains less than 10 tracks, pressing and holding **▶** recalls the last track of the folder. Also, if the remaining number of tracks after searching every 10 tracks is less than 10, pressing and holding **▶** recalls the last track of the folder.
- If the current folder contains less than 10 tracks, pressing and holding **◀** recalls the first track of the folder. Also, if the remaining number of tracks after searching every 10 tracks is less than 10, pressing and holding **◀** recalls the first track of the folder.

Using compression and BMX

Using the **COMP** (compression) and **BMX** functions let you adjust the sound playback quality of this player. Each of the functions has a two-step adjustment. The **COMP** function balances the output of louder and softer sounds at higher volumes. **BMX** controls sound reverberations to give playback a fuller sound. Listen to each of the effects as you select through them and use the one that best enhances the playback of the track or CD that you are listening to.

1. Press **FUNCTION** to select **COMP**.

Press **FUNCTION** until **COMP** appears in the display.

2. Press **▲** or **▼** to select your favorite setting.

Press **▲** or **▼** repeatedly to switch between the following settings:

COMP OFF – COMP 1 – COMP 2 – COMP OFF – BMX 1 – BMX 2

Displaying text information on MP3/WMA disc

Text information recorded on a MP3/WMA disc can be displayed.

• Press **DISPLAY**.

Press **DISPLAY** repeatedly to switch between the following settings:

Play time – **FOLDER** (folder name) – **FILE** (file name) – **TRK TTL** (track title) – **ART NAME** (artist name) – **ALBM TTL** (album title) – **COMMENT** (comment) – Bit rate

- When playing back MP3 files recorded as VBR (variable bit rate) files, the bit rate value is not displayed even after switching to bit rate.
- When playing back WMA files recorded as VBR files, the average bit rate is displayed.
- If specific information has not been recorded on an MP3/WMA disc, **NO XXXX** will be displayed (e.g., **NO NAME**).

MP3/WMA/WAV Player

- Depending on the version of iTunes® used to write MP3 files onto a disc, comment information may not be correctly displayed.
- iTunes® is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.
- Depending on the version of Windows Media Player used to encode WMA files, album names and other text information may not be correctly displayed.

Displaying text information on WAV disc

You can display text information recorded on a WAV disc.

● Press **DISPLAY**.

Press **DISPLAY** repeatedly to switch between the following settings:

Play time – **FOLDER** (folder name) – **FILE** (file name) – Sampling frequency

- Sampling frequency may not display all digits (e.g. **22.0 KHZ** is displayed when the sampling frequency is 22.05 kHz).

Scrolling text information in the display

This unit can display the first 8 letters only of **FOLDER**, **FILE**, **TRK TTL**, **ART NAME**, **ALBM TTL** and **COMMENT**. When the recorded information is longer than 8 letters, you can scroll the text to the left so that the rest of the text information can be seen.

● Press **DISPLAY** and hold until the text information begins to scroll to the left.

The rest of the text information will appear in the display.

Note

- Unlike MP3 and WMA file format, WAV files display only folder name and file name.

Multi-CD Player

Playing a CD

You can use this unit to control a multi-CD player, which is sold separately.

These are the basic steps necessary to play a CD with your multi-CD player. More advanced CD operation is explained starting on page 22.

① Disc number indicator

 
Shows the disc currently playing.

② Play time indicator

Shows the elapsed playing time of the current track.

③ Track number indicator

Shows the track currently playing.



1. Press **SOURCE** to select the multi-CD player.

Press **SOURCE** until multi-CD is selected as the source.

2. Use **VOLUME** to adjust the sound level.

Rotate it to increase or decrease the volume.

3. Select a disc you want to listen to with the 1–6 buttons.

For discs 1 to 6, press the corresponding button number.

For discs 7 to 12, press and hold the corresponding numbers, such as **1** for disc 7, until the disc number appears in the display.

- You can also sequentially select a disc by pressing **▲/▼**.

4. To perform fast forward or reverse, press and hold **◀** or **▶**.

5. To skip back or forward to another track, press **◀** or **▶**.

Pressing **▶** skips to the start of the next track. Pressing **◀** once skips to the start of the current track. Pressing again will skip to the previous track.

Notes

- When the multi-CD player performs the preparatory operations, **READY** is displayed.
- If an error message such as **ERROR-11** is displayed, refer to the multi-CD player owner's manual.
- If there are no discs in the multi-CD player magazine, **NO DISC** is displayed.
- When you select a CD TEXT disc on a CD TEXT compatible multi-CD player, the disc and track titles begin to scroll to the left automatically.

50-disc multi-CD player

Only those functions described in this manual are supported by 50-disc multi-CD players.

Introduction of advanced multi-CD player operation

- ① **Function display**
Shows the function status.

- ② **RPT indicator**
Shows when repeat range is selected to current track.



• Press **FUNCTION** to display the function names.

Press **FUNCTION** repeatedly to switch between the following functions:

RPT (repeat play) – **RDM** (random play) – **SCAN** (scan play) – **ITS-P** (ITS play) – **PAUSE** (pause) – **COMP** (compression and DBE)

- To return to the playback display, press **BAND**.

Note

- If you do not operate the function within about 30 seconds, the display is automatically returned to the playback display.

Repeating play

There are three repeat play ranges for the multi-CD player: **MCD** (multi-CD player repeat), **TRK** (one-track repeat) and **DSC** (disc repeat).

1. Press **FUNCTION** to select **RPT**.

Press **FUNCTION** until **RPT** appears in the display.

2. Press **◀** or **▶** to select the repeat range.

Press **◀** or **▶** until the desired repeat range appears in the display.

- **MCD** – Repeat all discs in the multi-CD player
- **TRK** – Repeat just the current track
- **DSC** – Repeat the current disc

Notes

- If you select other discs during repeat play, the repeat play range changes to **MCD**.
- If you perform track search or fast forward/reverse during **TRK**, the repeat play range changes to **DSC**.

Playing tracks in random order

Random play lets you play back tracks in random order within the repeat range, **MCD** and **DSC**.

1. Select the repeat range.

Refer to "Repeating play" on this page.

2. Press **FUNCTION** to select **RDM**.

Press **FUNCTION** until **RDM** appears in the display.

3. Press **▲** to turn random play on.

RDM :ON appears in the display. Tracks will play in a random order within the previously selected **MCD** or **DSC** ranges.

4. Press **▼** to turn random play off.

RDM :OFF appears in the display. Tracks will continue to play in order.

Note

- If you turn random play on during **DSC** and then return to the playback display, **DRDM** appears in the display.

Scanning CDs and tracks

While you are using **DSC**, the beginning of each track on the selected disc plays for about 10 seconds. When you are using **MCD**, the beginning of the first track of each disc is played for about 10 seconds.

1. Select the repeat range.

Refer to "Repeating play" on this page.

2. Press **FUNCTION** to select **SCAN**.

Press **FUNCTION** until **SCAN** appears in the display.

3. Press **▲** to turn scan play on.

SCAN :ON appears in the display. The first 10 seconds of each track of the current disc (or the first track of each disc) is played.

4. When you find the desired track (or disc) press **▼** to turn scan play off.

SCAN :OFF appears in the display. The track (or disc) will continue to play.

- If the display has automatically returned to the playback display, select **SCAN** again by pressing **FUNCTION**.

Notes

- After track or disc scanning is finished, normal playback of the tracks will begin again.
- If you turn scan play on during **DSC** and then return to the playback display, **DSCN** appears in the display.

Pausing CD playback

Pause lets you temporarily stop playback of the CD.

1. Press FUNCTION to select PAUSE.

Press **FUNCTION** until **PAUSE** appears in the display.

2. Press ▲ to turn pause on.

PAUSE:ON appears in the display. Play of the current track pauses.

3. Press ▼ to turn pause off.

PAUSE:OFF appears in the display. Play will resume at the same point that you turned pause on.

Note

- You can also turn pause on or off by pressing **PAUSE**.

Using ITS playlists

ITS (instant track selection) lets you make a playlist of favorite tracks from those in the multi-CD player magazine. After you have added your favorite tracks to the playlist you can turn on ITS play and play just those selections.

Creating a playlist with ITS programming

You can use ITS to enter and play back up to 99 tracks per disc from up to 100 discs (with the disc titles). (With multi-CD players sold before the CDX-P1250 and CDX-P650, up to 24 tracks can be stored in the playlist.)

1. Play a CD that you want to program.

Press **▲** or **▼** to select the CD.

2. Press FUNCTION and hold until TITLE IN appears in the display, then press FUNCTION to select ITS.

After **TITLE IN** is displayed, press **FUNCTION** repeatedly, the following functions appear in the display:

TITLE IN (disc title input) – **ITS** (ITS programming)

3. Select the desired track by pressing ◀ or ▶.

4. Press ▲ to store the currently playing track in the playlist.

ITS IN is displayed briefly and the currently playing selection is added to your playlist. The display then shows **ITS** again.

5. Press BAND to return to the playback display.

Note

- After data for 100 discs has been stored in memory, data for a new disc will overwrite the oldest one.

Playback from your ITS playlist

ITS play lets you listen to the tracks that you have entered into your ITS playlist. When you turn on ITS play, tracks from your ITS playlist in the multi-CD player will begin to play.

1. Select the repeat range.

Refer to "Repeating play" on page 22.

2. Press FUNCTION to select ITS-P.

Press **FUNCTION** until **ITS-P** appears in the display.

3. Press ▲ to turn ITS play on.

ITS-P:ON appears in the display. Playback begins of those tracks from your playlist within the previously selected **MCD** or **DSC** ranges.

- If no tracks in the current range are programmed for ITS play, then **EMPTY** is displayed.

4. Press ▼ to turn ITS play off.

ITS-P:OFF appears in the display. Playback will continue in normal order from the currently playing track and CD.

Erasing a track from your ITS playlist

You can delete a track from your ITS playlist if ITS play is on.

If ITS play is already on, skip to step 2. If ITS play is not already on, press **FUNCTION**.

1. Play the CD with the track you want to delete from your ITS playlist, and turn ITS play on.

Refer to "Playback from your ITS playlist" on this page.

2. Press FUNCTION and hold until TITLE IN appears in the display, then press FUNCTION to select ITS.

After **TITLE IN** is displayed, press **FUNCTION** until **ITS** appears in the display.

3. Select the desired track by pressing ◀ or ▶.

4. Press ▼ to erase the track from your ITS playlist.

The currently playing selection is erased from your ITS playlist and playback of the next track from your ITS playlist begins.

- If there are no tracks from your playlist in the current range, **EMPTY** is displayed and normal play resumes.

5. Press BAND to return to the playback display.

Multi-CD Player

Erasing a CD from your ITS playlist

You can delete all tracks of a CD from your ITS playlist if ITS play is off.

1. Play the CD that you want to delete.

Press ▲ or ▼ to select the CD.

2. Press FUNCTION and hold until TITLE IN appears in the display, then press FUNCTION to select ITS.

After TITLE IN is displayed, press FUNCTION until ITS appears in the display.

3. Press ▼ to erase all tracks on the currently playing CD from your ITS playlist.

All tracks on the currently playing CD are erased from your playlist and ITS CLR is displayed.

4. Press BAND to return to the playback display.

Using disc title functions

You can input CD titles and display the titles. Then you can easily search for and play a desired disc.

Entering disc titles

Use the disc title input feature to store up to 100 CD titles (with ITS playlist) into the multi-CD player. Each title can be up to 8 characters long.

1. Play the CD that you want to enter a title for.

Press ▲ or ▼ to select the CD.

2. Press FUNCTION and hold until TITLE IN appears in the display.

After TITLE IN is displayed, press FUNCTION repeatedly, the following functions appear in the display:

TITLE IN (disc title input) – ITS (ITS programming)

- When playing a CD TEXT disc on a CD TEXT compatible multi-CD player, you cannot switch to **TITLE IN**. The disc title has already been recorded on a CD TEXT disc.

3. Press ▲ or ▼ to select a letter of the alphabet.

Each press of ▲ will display a letter of the alphabet in **A B C ... X Y Z**, numbers and symbols in **1 2 3 ... > []** order. Each press of ▼ will display a letter in the reverse order, such as **Z Y X ... C B A** order.



4. Press ► to move the cursor to the next character position.

When the letter you want is displayed, press ► to move the cursor to the next position and then select the next letter. Press ◀ to move backwards in the display.

5. Move the cursor to the last position by pressing ► after entering the title.

When you press ► one more time, the entered title is stored in memory.

6. Press BAND to return to the playback display.

Notes

- Titles remain in memory, even after the disc has been removed from the magazine, and are recalled when the disc is reinserted.
- After data for 100 discs has been stored in memory, data for a new disc will overwrite the oldest one.

Displaying disc titles

You can display the text information of any disc that has had a disc title entered.

• Press DISPLAY.

Press **DISPLAY** repeatedly to switch between the following settings:

Play time – **DISC TTL** (disc title)

When you select **DISC TTL**, the title of the currently playing disc is shown in the display.

- If no title has been entered for the currently playing disc, **NO D-TTL** is displayed.

Using CD TEXT functions

You can use these functions only with a CD TEXT compatible multi-CD player.

Some discs have certain information encoded on the disc during manufacture. These discs may contain such information as the CD title, track title, artist's name and playback time and are called CD TEXT discs. Only these specially encoded CD TEXT discs support the functions listed below.

Displaying text information on CD TEXT discs

• Press DISPLAY.

Press **DISPLAY** repeatedly to switch between the following settings:

Play time – **DISC TTL** (disc title) – **ART NAME** (disc artist name) – **TRK TTL** (track title) – **ART NAME** (track artist name)

- If specific information has not been recorded on a CD TEXT disc, **NO XXXX** will be displayed (e.g., **NO T-TTL**).

Multi-CD Player

Scrolling text information in the display

This unit can display the first 8 letters only of **DISC TTL**, **ART NAME**, **TRK TTL** and **ART NAME**. When the recorded information is longer than 8 letters, you can scroll the text to the left so that the rest of the title can be seen.

- Press **DISPLAY** and hold until the title begins to scroll to the left.

The rest of the title will appear in the display.

Using compression and bass emphasis

You can use these functions only with a multi-CD player that supports them.

Using **COMP** (compression) and **DBE** (dynamic bass emphasis) functions lets you adjust the sound playback quality of the multi-CD player. Each of the functions has a two-step adjustment. The **COMP** function balances the output of louder and softer sounds at higher volumes. **DBE** boosts bass levels to give playback a fuller sound. Listen to each of the effects as you select them and use the one that best enhances the playback of the track or CD that you are listening to.

1. Press **FUNCTION** to select **COMP**.

Press **FUNCTION** until **COMP** appears in the display.

- If the multi-CD player does not support **COMP/DBE**, **NO COMP** is displayed when you attempt to select it.

2. Press **▲** or **▼** to select your favorite setting.

Press **▲** or **▼** repeatedly to switch between the following settings:

COMP OFF – COMP 1 – COMP 2 – COMP OFF – DBE 1 – DBE 2

Audio Adjustments

Introduction of audio adjustments

① **CUSTOM** indicator

Shows when custom equalizer curve is currently selected.

② **Equalizer curve**

Shows which equalizer preset is currently selected.

③ **Audio display**

Shows the audio adjustment status.

④ **SW** indicator


Shows when the subwoofer output is turned on.

⑤ **EQ-EX** indicator

Appears in the display when EQ-EX function can be activated.

⑥ **LOUD** indicator

Appears in the display when loudness is turned on.

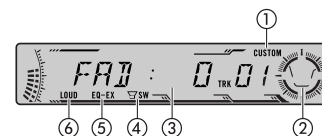

● Press **AUDIO** to display the audio function names.

Press **AUDIO** repeatedly to switch between the following audio functions:

FAD (balance adjustment) – **EQ** (equalizer curve adjustment) – **BASS** (bass and treble level adjustment) – **LOUD** (loudness) – **SUB, W** (subwoofer on/off setting)/**NOFAD** (non fading output on/off setting) – **80: 0** (subwoofer setting)/**NOFAD** (non fading output setting) – **HPF** (high pass filter) – **SLA** (source level adjustment)

- If EQ-EX function has been selected and only when EQ-EX is turned on and **CUSTOM** is selected as the equalizer curve, you can switch to **BASS**.
- When the subwoofer controller setting is **P/O:FUL**, you cannot switch to **SUB, W**. (Refer to page 31.)
- You can select the **80: 0** only when subwoofer output is turned on in **SUB, W**.
- When the subwoofer controller setting is only **P/O:FUL**, you can switch to the nonfading output on/off setting. (Refer to page 31.)
- You can select the nonfading output setting only when nonfading output is turned on in the nonfading output on/off setting.
- When selecting the FM tuner as the source, you cannot switch to **SLA**.
- To return to the display of each source, press **BAND**.

Note

- If you do not operate the audio function within about 30 seconds, the display is automatically returned to the source display.

Compensating for equalizer curves (EQ-EX)

The EQ-EX function accentuates the effects of each equalizer curve. Furthermore, you can adjust bass and treble for each source when **CUSTOM** curve is selected.

• Press and hold **SW** to turn **EQ-EX** on.

EQ-EX:ON appears in the display. EQ-EX is now on.

- To turn EQ-EX off, press and hold **SW**.
- If you do not operate the EQ-EX within about 8 seconds, the EQ-EX function is cancelled automatically.

Using balance adjustment

You can select a fader/balance setting that provides an ideal listening environment in all occupied seats.

1. Press **AUDIO** to select **FAD**.

Press **AUDIO** until **FAD** appears in the display.

- If the balance setting has been previously adjusted, **BAL** will be displayed.

2. Press **▲** or **▼** to adjust front/rear speaker balance.

Each press of **▲** or **▼** moves the front/rear speaker balance towards the front or the rear.

FAD:F15 – FAD:R15 is displayed as the front/rear speaker balance moves from front to rear.

- **FAD : 0** is the proper setting when only two speakers are used.

3. Press **◀** or **▶** to adjust left/right speaker balance.

When you press **◀** or **▶**, **BAL : 0** is displayed. Each press of **◀** or **▶** moves the left/right speaker balance towards the left or the right.

BAL:L9 – BAL:R9 is displayed as the left/right speaker balance moves from left to right.

Using the equalizer

The equalizer lets you adjust the equalization to match car interior acoustic characteristics as desired.

Recalling equalizer curves

There are six stored equalizer curves which you can easily recall at any time. Here is a list of the equalizer curves:

Display	Equalizer curve
SPR-BASS	Super bass
POWERFUL	Powerful
NATURAL	Natural
VOCAL	Vocal
CUSTOM	Custom
EQ FLAT	Flat

- **CUSTOM** is an adjusted equalizer curve that you create.
- A separate **CUSTOM** curve can be created for each source. (The built-in CD player and the multi-CD player are set to the same equalizer adjustment setting automatically.) If you make adjustments, the equalizer curve settings will be memorized in **CUSTOM**.
- When **EQ FLAT** is selected no supplement or correction is made to the sound. This is useful to check the effect of the equalizer curves by switching alternatively between **EQ FLAT** and a set equalizer curve.

• Press **EQ** to select the equalizer.

Press **EQ** repeatedly to switch between the following equalizers:

SPR-BASS – POWERFUL – NATURAL – VOCAL – CUSTOM – EQ FLAT

Adjusting equalizer curves

You can adjust the currently selected equalizer curve setting as desired. Adjusted equalizer curve settings are memorized in **CUSTOM**.

1. Press **AUDIO** to select **EQ**.

Press **AUDIO** until **EQ** appears in the display.

2. Press **◀** or **▶** to select the equalizer band to adjust.

Each press of **◀** or **▶** selects equalizer bands in the following order:

EQ-L (low) – **EQ-M** (mid) – **EQ-H** (high)

Audio Adjustments

3. Press ▲ or ▼ to adjust the level of the equalizer band.

Each press of ▲ or ▼ increases or decreases the level of the equalization band.

+6 – –6 is displayed as the level is increased or decreased.


- You can then select another band and adjust the level.

Note

- If you make adjustments, **CUSTOM** curve is updated.

Fine-adjusting equalizer curve

You can adjust the center frequency and the Q factor (curve characteristics) of each currently selected curve band (**EQ-L/EQ-M/EQ-H**).

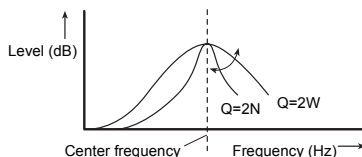

1. Press **AUDIO** and hold until frequency and the Q factor (e.g., F- 80:Q1W) appears in the display.

2. Press **AUDIO** to select the desired band for adjustment.

Low – Mid – High

3. Press ◀ or ▶ to select the desired frequency.

Press ◀ or ▶ until the desired frequency appears in the display.

Low: 40 – 80 – 100 – 160 (Hz)

Mid: 200 – 500 – 1k – 2k (Hz)

High: 3k – 8k – 10k – 12k (Hz)

4. Press ▲ or ▼ to select the desired Q factor.

Press ▲ or ▼ until the desired Q factor appears in the display.

2N – 1N – 1W – 2W

Note

- If you make adjustments, **CUSTOM** curve is updated.

Adjusting bass and treble

You can adjust bass and treble settings.

- If EQ-EX function has been selected and EQ-EX turned on and **CUSTOM** selected as the equalizer curve, you can adjust bass and treble settings.

Adjusting bass and treble level

You can adjust the bass and treble level.

1. Press **AUDIO** to select **BASS**.

Press **AUDIO** until **BASS** appears in the display.

- If the treble level has been previously adjusted, **Treble** will be displayed.

2. Press ◀ or ▶ to select bass or treble.

Press ◀ and **BASS** is displayed. Press ▶ and **Treble** is displayed.

3. Press ▲ or ▼ to adjust the level.

Each press of ▲ or ▼ increases or decreases the selected bass or treble level.

+6 – –6 is displayed as the level is increased or decreased.

Selecting bass frequency

You can select the bass frequency for level adjustment.

1. Press **AUDIO** and hold until frequency and the Q factor (e.g., F- 80:Q1W) appears in the display.

2. Press **AUDIO** to select **B**.

Press **AUDIO** until **B** appears in the display.

3. Press ◀ or ▶ to select the desired frequency.

Press ◀ or ▶ until the desired frequency appears in the display.

40 – 63 – 100 – 160 (Hz)

Selecting treble frequency

You can select the treble frequency for level adjustment.

1. Press **AUDIO** and hold until frequency and the Q factor (e.g., F- 80:Q1W) appears in the display.

2. Press **AUDIO** to select **T**.

Press **AUDIO** until **T** appears in the display.

3. Press ◀ or ▶ to select the desired frequency.

Press ◀ or ▶ until the desired frequency appears in the display.

2k – 4k – 6k – 10k (Hz)

Adjusting loudness

Loudness compensates for deficiencies in the low- and high-sound ranges at low volume.

1. Press **AUDIO** to select **LOUD**.

Press **AUDIO** until **LOUD** appears in the display.

2. Press **▲** to turn loudness on.

Loudness level (e.g., **LOUD :MID**) appears in the display.

3. Press **◀** or **▶** to select a desired level.

Each press of **◀** or **▶** selects level in the following order:

LOW (low) – **MID** (mid) – **HI** (high)

4. Press **▼** to turn loudness off.

LOUD :OFF appears in the display.

Using subwoofer output

Turning a subwoofer on/off

This unit is equipped with a subwoofer output which can be turned on or off.

1. Press **AUDIO** to select **SUB, W**.

Press **AUDIO** until **SUB, W** appears in the display.

- You can also select the subwoofer setting menu by pressing **SW** on the unit.
- When the subwoofer controller setting is **P/O:FUL**, you cannot select **SUB, W**.

2. Press **▲** to turn subwoofer output on.

Sub W.:NOR appears in the display. Subwoofer output is now on.

- If the subwoofer output phase has been set to the reverse, **Sub W.:REV** will be displayed.
- To turn subwoofer output off, press **▼**.

3. Press **◀** or **▶** to select the phase of subwoofer output.

Press **◀** to select reverse phase and **Rev.** appears in the display. Press **▶** to select normal phase and **Normal** appears in the display.

Adjusting subwoofer settings

When the subwoofer output is on, you can adjust the cut-off frequency and the output level of the subwoofer.

1. Press **AUDIO** to select **80: 0**.

Press **AUDIO** until **80: 0** appears in the display.

- When the subwoofer output is on, you can select **80: 0**.
- If the subwoofer setting has been previously adjusted, the frequency of that previously selected will be displayed instead of **80**.
- You can also select the subwoofer setting menu by pressing **SW** on the unit.

2. Press **◀** or **▶** to select cut-off frequency.

Each press of **◀** or **▶** selects cut-off frequencies in the following order:

50 – 80 – 125 (Hz)

Only frequencies lower than those in the selected range are outputted from the subwoofer.

3. Press **▲** or **▼** to adjust the output level of the subwoofer.

Each press of **▲** or **▼** increases or decreases the level of the subwoofer. **+6 – –6** is displayed as the level is increased or decreased.

Using nonfading output

When the nonfading output setting is on, the audio signal does not pass through this unit's low pass filter (for the subwoofer), but is outputted through the RCA output.

1. Press **AUDIO** to select nonfading output on/off setting.

Press **AUDIO** until **NOFAD:ON** appears in the display.

- When the subwoofer controller setting is only **P/O:FUL**, you can switch to the nonfading output on/off setting. (Refer to page 31.)

2. Press **▲** to turn nonfading output on.

NOFAD:ON appears in the display. Nonfading output is now on.

- To turn nonfading output off, press **▼**.

Audio Adjustments

Adjusting nonfading output level

When the nonfading output is on, you can adjust the level of nonfading output.

1. Press AUDIO to select nonfading output setting.

Press **AUDIO** until **NOFAD: 0** appears in the display.

2. Press ▲ or ▼ to adjust the nonfading output level.

Each press of **▲** or **▼** increases or decreases the level of the nonfading output.
+6 – –6 is displayed as the level is increased or decreased.

Using the high pass filter

When you do not want low sounds from the subwoofer output frequency range to play from the front or rear speakers, turn on the HPF (high pass filter). Only frequencies higher than those in the selected range are outputted from the front or rear speakers.

1. Press AUDIO to select HPF.

Press **AUDIO** until **HPF** appears in the display.

2. Press ▲ to turn high pass filter on.

HPF: 80 appears in the display. High pass filter is now on.

- If the high pass filter has been previously adjusted, the frequency of that previously selected will be displayed instead of **HPF: 80**.
- To turn high pass filter off, press **▼**.

3. Press ◀ or ▶ to select cut-off frequency.

Each press of **◀** or **▶** selects cut-off frequencies in the following order:

50 – 80 – 125 (Hz)

Only frequencies higher than those in the selected range are outputted from the front or rear speakers.

Adjusting source levels

SLA (source level adjustment) lets you adjust the volume level of each source to prevent radical changes in volume when switching between sources.

- Settings are based on the FM tuner volume level, which remains unchanged.

1. Compare the FM tuner volume level with the level of the source you wish to adjust.

2. Press AUDIO to select SLA.

Press **AUDIO** until **SLA** appears in the display.

3. Press ▲ or ▼ to adjust the source volume.

Each press of **▲** or **▼** increases or decreases the source volume.

SLA : +4 – SLA : –4 is displayed as the source volume is increased or decreased.

Notes

 
- Since the FM tuner volume is the control, it is not possible to apply source level adjustments to the FM tuner.
- The MW/LW tuner volume level can also be adjusted with source level adjustments.
- The built-in CD player and the multi-CD player are set to the same source level adjustment volume automatically.
- External unit 1 and external unit 2 are set to the same source level adjustment volume automatically.

Adjusting initial settings

Using the initial settings, you can customize various system settings to achieve optimal performance from this unit.

① Function display

Shows the function status.



1. Press **SOURCE** and hold until the unit turns off.

2. Press **FUNCTION** and hold until function name appears in the display.

3. Press **FUNCTION** to select one of the initial settings.

Press **FUNCTION** repeatedly to switch between the following settings:

FM (FM tuning step) – **A-PI** (auto PI seek) – **WARN** (warning tone) – **AUX** (auxiliary input) – **R-SP** (rear output and subwoofer controller)

Use the following instructions to operate each particular setting.

- To cancel initial settings, press **BAND**.
- You can also cancel initial settings by holding down **FUNCTION** until the unit turns off.

Setting the FM tuning step

Normally the FM tuning step employed by seek tuning is 50 kHz. When AF or TA is on, the tuning step automatically changes to 100 kHz. It may be preferable to set the tuning step to 50 kHz when AF is on.

1. Press **FUNCTION** to select **FM**.

Press **FUNCTION** repeatedly until **FM** appears in the display.

2. Press **◀** or **▶** to select the FM tuning step.

Pressing **◀** or **▶** will switch the FM tuning step between 50 kHz and 100 kHz while AF or TA is on. The selected FM tuning step will appear in the display.

Note

- The tuning step remains at 50 kHz during manual tuning.

Switching Auto PI Seek

The unit can automatically search for a different station with the same programming, even during preset recall.

1. Press **FUNCTION** to select **A-PI**.

Press **FUNCTION** repeatedly until **A-PI** appears in the display.

2. Press **▲** or **▼** to turn **A-PI** on or off.

Pressing **▲** or **▼** will turn **A-PI** on or off and that status will be displayed (e.g., **A-PI :ON**).

Switching the warning tone

If the front panel is not detached from the head unit within five seconds of turning off the ignition, a warning tone will sound. You can turn off the warning tone.

1. Press **FUNCTION** to select **WARN**.

Press **FUNCTION** repeatedly until **WARN** appears in the display.

2. Press **▲** or **▼** to turn **WARN** on or off.

Pressing **▲** or **▼** will turn **WARN** on or off and that status will be displayed (e.g., **WARN :ON**).

Switching the auxiliary setting

It is possible to use auxiliary equipment with this unit. Activate the auxiliary setting when using auxiliary equipment connected to this unit.

1. Press **FUNCTION** to select **AUX**.

Press **FUNCTION** repeatedly until **AUX** appears in the display.

2. Press **▲** or **▼** to turn **AUX** on or off.

Pressing **▲** or **▼** will turn **AUX** on or off and that status will be displayed (e.g., **AUX :ON**).

Setting the rear output and subwoofer controller

This unit's rear output (rear speaker leads output) can be used for full-range speaker (**R-SP : FUL**) or subwoofer (**R-SP : S/W**) connection. If you switch the rear output setting to **R-SP : S/W**, you can connect a rear speaker lead directly to a subwoofer without using an auxiliary amp.

Initially, the unit is set for rear full-range speaker connection (**R-SP : FUL**). When rear output is connected to full range speakers (when **R-SP : FUL** is selected), you can connect the RCA subwoofer output to a subwoofer. In this case, you can select whether to use the subwoofer controller's (low pass filter, phase) built-in **P/O:S/W** or the auxiliary **P/O:FUL**.

1. Press **FUNCTION** to select **R-SP**.

Press **FUNCTION** repeatedly until **R-SP** appears in the display.

2. Press **▲** or **▼** to switch the rear output setting.

Pressing **▲** or **▼** will switch between **R-SP : FUL** (full-range speaker) and **R-SP : S/W** (subwoofer) and that status will be displayed.

- When no subwoofer is connected to the rear output, select **R-SP : FUL**.
- When a subwoofer is connected to the rear output, set for subwoofer **R-SP : S/W**.
- When the rear output setting is **R-SP : S/W**, you cannot change the subwoofer controller.

3. Press **◀** or **▶** to switch the subwoofer output or non fading output.

Pressing **◀** or **▶** will switch between **P/O:S/W** and **P/O:FUL** and that status will be displayed.

Notes

- Even if you change this setting, there is no output unless you turn the nonfading output (refer to "Using nonfading output" on page 28) or subwoofer output (refer to "Using subwoofer output" on page 28) in the audio menu on.
- If you change the subwoofer controller, subwoofer output and nonfading output in the audio menu return to the factory settings.

Switching the display illumination

You can change the color of the display illumination.

● Press **ILLUMINATION**.

ILL:CHG appears in the display.

Each time you press **ILLUMINATION** the color changes:

RAINBOW(rainbow) – **WHITE**(white) – **SKYBLUE**(sky blue) – **O-Blue**(ocean blue) – **DEEPBLUE**(deep blue) – **PINK**(pink) – **RED**(red) – **AMBER**(amber) – **ORANGE**(orange) – **GREEN**(green) – **P-GREEN**(pure green)

Note

- **RAINBOW** setting cycles continuously through all the colors.

Switching the button illumination

You can change the color of the button illumination.

1. Press **ILLUMINATION** and hold until **KEY:CHG** appears in the display.

2. Press **ILLUMINATION** to select a button illumination color.

Each time you press **ILLUMINATION** the color changes:

WHITE(white) – **SKYBLUE**(sky blue) – **O-Blue**(ocean blue) – **DEEPBLUE**(deep blue) – **PINK**(pink) – **RED**(red) – **AMBER**(amber) – **ORANGE**(orange) – **GREEN**(green) – **P-GREEN**(pure green)

Notes

- When the color of the display illumination is set to **RAINBOW**, the button illumination is changed to **RAINBOW** simultaneously. If you want to change the button illumination, change the display illumination to colors other than **RAINBOW**, and then operate the button illumination function.
- It is not possible to switch from the display illumination setting to the button illumination setting directly. First press **BAND** to return to the normal display, then try again.

Other Functions

Using the AUX source

An IP-BUS-RCA Interconnector such as the CD-RB20/CD-RB10 (sold separately) lets you connect this unit to auxiliary equipment featuring RCA output. For more details, refer to the IP-BUS-RCA Interconnector owner's manual.

Selecting AUX as the source

- Press **SOURCE** to select **AUX** as the source.

Press **SOURCE** until **AUX** appears in the display.

- If the auxiliary setting is not turned on, **AUX** cannot be selected. For more details, see "Switching the auxiliary setting" on page 30.

Setting the AUX title

The title displayed for the **AUX** source can be changed.

1. After you have selected **AUX** as the source, press **FUNCTION** and hold until **TITLE IN** appears in the display.
2. Press **▲** or **▼** to select a letter of the alphabet.

Each press of **▲** will display a letter of the alphabet in **A B C ... X Y Z**, numbers and symbols in **1 2 3 ... > []** order. Each press of **▼** will display a letter in the reverse order, such as **Z Y X ... C B A** order.



3. Press **►** to move the cursor to the next character position.

When the letter you want is displayed, press **►** to move the cursor to the next position and then select the next letter. Press **◄** to move backwards in the display.

4. Move the cursor to the last position by pressing **►** after entering the title.

When you press **►** one more time, the entered title is stored in memory.

5. Press **BAND** to return to the playback display.

Additional Information

Understanding built-in CD player error messages

When you contact your dealer or your nearest Pioneer Service Center, be sure to record the error message.

Message	Cause	Action
ERROR-11, 12, 17, 30	Dirty disc	Clean disc.
ERROR-11, 12, 17, 30	Scratched disc	Replace disc.
ERROR-15	The inserted disc does not contain any data	Replace disc.
ERROR-10, 11, 12, 15, 17, 30, A0	Electrical or mechanical	Turn the ignition ON and OFF, or switch to a different source, then back to the CD player.
ERROR-22, 23	The CD format cannot be played back	Replace disc.
ERROR-44	All tracks are skip tracks	Replace disc.
HEAT	CD player overheated	Turn off the CD player until the CD player cools down.

Sound muting

Sound from this unit is muted automatically in the following cases:

- When a call is made or received using a cellular telephone connected to this unit.
- When the voice guidance is output from a Pioneer navigation unit connected to this unit.

The sound is turned off, **MUTE** is displayed and no audio adjustments, except volume control, are possible. Operation returns to normal when the phone connection or the voice guidance is ended.

CD player and care

- Use only CDs that have either of the two Compact Disc Digital Audio marks as shown below.



Additional Information

- Use only normal, round CDs. If you insert irregular, non-round, shaped CDs they may jam in the CD player or not play properly.



- Check all CDs for cracks, scratches or warping before playing. CDs that have cracks, scratches or are warped may not play properly. Do not use such discs.
- Avoid touching the recorded (non-printed) surface when handling the disc.
- Store discs in their cases when not in use.
- Keep discs out of direct sunlight and do not expose the discs to high temperatures.
- Do not attach labels, write on or apply chemicals to the surface of the discs.
- To clean a CD, wipe the disc with a soft cloth outward from the center.



- If the heater is used in cold weather, moisture may form on components inside the CD player. Condensation may cause the CD player to malfunction. If you think that condensation is a problem turn off the CD player for an hour or so to allow it to dry out and wipe any damp discs with a soft cloth to remove the moisture.
- Road shocks may interrupt CD playback.

CD-R/CD-RW discs

- When CD-R/CD-RW discs are used, playback is possible only for discs which have been finalized.
- It may not be possible to play back CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc., on the lens of this unit.
- Playback of discs recorded on a personal computer may not be possible, depending on the application settings and the environment. Please record with the correct format. (For details, contact the manufacturer of the application.)
- Playback of CD-R/CD-RW discs may become impossible in case of direct exposure to sunlight, high temperatures, or the storage conditions in the vehicle.
- Titles and other text information recorded on a CD-R/CD-RW disc may not be displayed by this unit (in the case of audio data (CD-DA)).

- This unit conforms to the track skip function of the CD-R/CD-RW disc. The tracks containing the track skip information are skipped automatically (in case of audio data (CD-DA)).
- If you insert a CD-RW disc into this unit, time to playback will be longer than when you insert a conventional CD or CD-R disc.
- Read the precautions with CD-R/CD-RW discs before using them.

MP3, WMA and WAV files

- MP3 is short for MPEG Audio Layer 3 and refers to an audio compression technology standard.
- WMA is short for Windows Media™ Audio and refers to an audio compression technology that is developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player version 7 or later.
- This unit plays back WMA files encoded by Windows Media Player version 7, 7.1, 8 and 9.
- WAV is short for waveform. It is a standard audio file format for Windows®.
- Depending on the version of Windows Media Player used to encode WMA files, album names and other text information may not be correctly displayed.
- There may be a slight delay when starting playback of WMA files encoded with image data.
- This unit allows playback of MP3/WMA/WAV files on CD-ROM, CD-R and CD-RW discs. Disc recordings compatible with level 1 and level 2 of ISO9660 and with the Romeo and Joliet file system can be played back.
- It is possible to play back multi-session compatible recorded discs.
- MP3/WMA/WAV files are not compatible with packet write data transfer.
- The maximum number of characters which can be displayed for a file name, including the extension (.mp3, .wma or .wav), is 64, from the first character.
- The maximum number of characters which can be displayed for a folder name is 64.
- In case of files recorded according to the Romeo file system, only the first 64 characters can be displayed.
- When playing discs with MP3/WMA/WAV files and audio data (CD-DA) such as CD-EXTRA and MIXED-MODE CDs, both types can be played only by switching mode between MP3/WMA/WAV and CD-DA.
- The folder selection sequence for playback and other operations becomes the writing sequence used by the writing software. For this reason, the expected sequence at the time of playback may not coincide with the actual playback sequence. However, there also is some writing software which permits setting of the playback order.

Additional Information

- Some audio CDs contain tracks that merge into one another without a pause. When these discs are converted to MP3/WMA/WAV files and burned to a CD-R/CD-RW/CD-ROM, the files will be played back on this player with a short pause between each one, regardless of the length of the pause between tracks on the original audio CD.

Important

- When naming an MP3/WMA/WAV file, add the corresponding filename extension (.mp3, .wma or .wav).
- This unit plays back files with the filename extension (.mp3, .wma or .wav) as an MP3/WMA/WAV file. To prevent noise and malfunctions, do not use these extensions for files other than MP3/WMA/WAV files.

MP3 additional information

- Files are compatible with the ID3 Tag Ver. 1.0, 1.1, 2.2, 2.3 and 2.4 formats for display of album (disc title), track (track title), artist (track artist) and comments. Ver. 2.x of ID3 Tag is given priority when both Ver. 1.x and Ver. 2.x exist.
- The emphasis function is valid only when MP3 files of 32 kHz, 44.1 kHz and 48 kHz frequencies are played back. (16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz sampling frequencies can be played back.)
- There is no m3u playlist compatibility.
- There is no compatibility with the MP3i (MP3 interactive) or mp3 PRO formats.
- The sound quality of MP3 files generally becomes better with an increased bit rate. This unit can play recordings with bit rates from 8 kbps to 320 kbps, but in order to be able to enjoy sound of a certain quality, we recommend using only discs recorded with a bit rate of at least 128 kbps.

WMA additional information

- WMA is short for Windows Media™ Audio and refers to an audio compression technology that is developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player version 7 or later.
- You can only play back WMA files in the frequencies 32 kHz, 44.1 kHz and 48 kHz.
- The sound quality of WMA files generally becomes better with an increased bit rate. This unit can play recordings with bit rates from 48 kbps to 320 kbps (CBR) or from 48 kbps to 384 kbps (VBR), but in order to be able to enjoy sound of a certain quality, we recommend using discs recorded with a higher bit rate.
- This unit doesn't support the following formats.
 - Windows Media Audio 9 Professional (5.1ch)
 - Windows Media Audio 9 Lossless
 - Windows Media Audio 9 Voice

WAV additional information

- This unit plays back WAV files encoded in Linear PCM (LPCM) format or MS ADPCM format.
- You can only play back WAV files in the frequencies 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz and 48 kHz (LPCM), or 22.05 kHz and 44.1 kHz (MS ADPCM). The sampling frequency shown in the display may be rounded.
- The sound quality of WAV files generally becomes better with a larger number of quantization bits. This unit can play recordings with 8 and 16 (LPCM) or 4 (MS ADPCM) quantization bits, but in order to be able to enjoy sound of a certain quality, we recommend using discs recorded with the larger number of quantization bits.


About folders and MP3/WMA/WAV files

- An outline of a CD-ROM with MP3/WMA/WAV files on it is shown below. Subfolders are shown as folders in the folder currently selected.

Notes

- This unit assigns folder numbers. The user cannot assign folder numbers.
- It is not possible to check folders that do not include MP3/WMA/WAV files. (These folders will be skipped without displaying the folder number.)
- MP3/WMA/WAV files in up to 8 tiers of folders can be played back. However, there is a delay in the start of playback on discs with numerous tiers. For this reason we recommend creating discs with no more than 2 tiers.
- It is possible to play back up to 99 folders on one disc.

- ① First level
- ② Second level
- ③ Third level

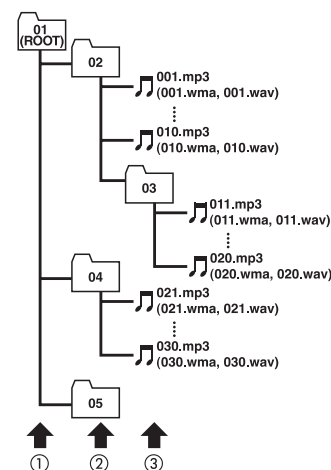

Terms

Bit rate

This expresses data volume per second, or bps (bits per second) units. The higher the rate, the more information is available to reproduce the sound. Using the same encoding method (such as MP3), the higher the rate, the better the sound.

ID3 tag

This is a method of embedding track-related information in an MP3 file. This embedded information can include the track title, the artist's name, the album title, the music genre, the year of production, comments and other data. The contents can be freely edited using software with ID3 Tag editing functions. Although the tags are restricted as to the number of characters, the information can be viewed when the track is played back.

ISO9660 format

This is the international standard for the format logic of CD-ROM folders and files. For the ISO9660 format, there are regulations for the following two levels.

Level 1:

The file name is in 8.3 format (the name consists of up to 8 characters, half-byte English capital letters and half-byte numerals and the “_” sign, with a file-extension of three characters).

Level 2:

The file name can have up to 31 characters (including the separation mark “.” and a file extension). Each folder contains less than 8 hierarchies.

Extended formats

Joliet: File names can have up to 64 characters.

Romeo: File names can have up to 128 characters.

Linear PCM (LPCM)/Pulse code modulation

This stands for linear pulse code modulation, which is the signal recording system used for music CDs and DVDs.

m3u

Playlists created using the “WINAMP” software have a playlist file extension (.m3u).

MP3

MP3 is short for MPEG Audio Layer 3. It is an audio compression standard set by a working group (MPEG) of the ISO (International Standards Organization). MP3 is able to compress audio data to about 1/10th the level of a conventional disc.

MS ADPCM

This stands for Microsoft adaptive differential pulse code modulation, which is the signal recording system used for the multimedia software of Microsoft Corporation.

Multi-session

Multi-session is a recording method that allows additional data to be recorded later. When recording data on a CD-ROM, CD-R or CD-RW, etc., all data from beginning to end is treated as a single unit or session. Multi-session is a method of recording more than 2 sessions on one disc.

Number of quantization bits

The sound quality of WAV files generally becomes better with a larger number of quantization bits. This unit can play recordings with 8 and 16 (LPCM) or 4 (MS ADPCM) quantization bits, but in order to be able to enjoy sound of a certain quality, we recommend using discs recorded with the larger number of quantization bits.

Packet write

This is a general term for a method of writing on CD-R, etc., at the time required for a file, just as is done with files on floppy or hard discs.

VBR

VBR is short for variable bit rate. Generally speaking CBR (constant bit rate) is more widely used. But by flexibly adjusting the bit rate according to the needs of audio compression, it is possible to achieve compression-priority sound quality.

WAV

WAV is short for waveform. It is a standard audio file format for Windows®.

WMA

WMA is short for Windows Media™ Audio and refers to an audio compression technology that is developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player version 7 or later.

Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Specifications

General

Power source	14.4 V DC (10.8 – 15.1 V allowable)
Grounding system	Negative type
Max. current consumption	10.0 A
Dimensions (W × H × D):	
DIN	
Chassis	178 × 50 × 157 mm
Nose	188 × 58 × 20 mm
D	
Chassis	178 × 50 × 162 mm
Nose	170 × 46 × 15 mm
Weight	1.4 kg

Audio

Maximum power output	50 W × 4
50 W × 2/4 Ω + 70 W × 1/2 Ω	
(for subwoofer)	
Continuous power output	27 W × 4
(DIN 45324, +B=14.4 V)	
Load impedance	4 – 8 Ω × 4
4 – 8 Ω × 2 + 2 Ω × 1	
Preout max output level/	
output impedance	2.2 V/1 kΩ
Equalizer (3-Band Parametric Equalizer):	
Low	
Frequency	40/80/100/160 Hz
Q Factor	0.35/0.59/0.95/1.15
(+6 dB when boosted)	
Gain	±12 dB
Mid	
Frequency	200/500/1k/2k Hz
Q Factor	0.35/0.59/0.95/1.15
(+6 dB when boosted)	
Gain	±12 dB
High	
Frequency	3.15k/8k/10k/12.5k Hz
Q Factor	0.35/0.59/0.95/1.15
(+6 dB when boosted)	
Gain	±12 dB
Loudness contour:	
Low	+3.5 dB (100 Hz), +3 dB (10 kHz)
Mid	+10 dB (100 Hz), +6.5 dB (10 kHz)
High	+11 dB (100 Hz), +11 dB (10 kHz)
(volume: –30 dB)	
Tone controls:	
Bass	
Frequency	40/63/100/160 Hz
Gain	±12 dB
Treble	
Frequency	2.5k/4k/6.3k/10k Hz
Gain	±12 dB

Note

- Specifications and the design are subject to possible modifications without notice due to improvements.

HPF:

Frequency	50/80/125 Hz
Slope	–12 dB/oct
Subwoofer:	
Frequency	50/80/125 Hz
Slope	–18 dB/oct
Gain	±12 dB
Phase	Normal/Reverse

CD player

System	Compact disc audio system
Usable discs	Compact disc
Signal format:	
Sampling frequency	44.1 kHz
Number of quantization bits	16; linear
Frequency characteristics	5 – 20 000 Hz (±1 dB)
Signal-to-noise ratio	94 dB (1 kHz)
(IEC-A network)	
Dynamic range	92 dB (1 kHz)
Number of channels	2 (stereo)
MP3 decoding format	MPEG-1 & 2 Audio Layer 3
WMA decoding format	Ver. 7, 8 & 9
WAV signal format	Linear PCM & MS ADPCM

FM tuner

Frequency range	87.5 – 108.0 MHz
Usable sensitivity	8 dBf (0.7 μV/75 Ω,
mono, S/N: 30 dB)	
50 dB quieting sensitivity	10 dBf (0.9 μV/
75 Ω, mono)	
Signal-to-noise ratio	75 dB (IEC-A network)
Distortion	0.3 % (at 65 dBf, 1 kHz, stereo)
0.1 % (at 65 dBf, 1 kHz, mono)	
Frequency response	30 – 15 000 Hz (±3 dB)
Stereo separation	45 dB (at 65 dBf, 1 kHz)
Selectivity	80 dB (±200 kHz)

MW tuner

Frequency range	531 – 1 602 kHz (9 kHz)
Usable sensitivity	18 μV (S/N: 20 dB)
Signal-to-noise ratio	65 dB (IEC-A network)

LW tuner

Frequency range	153 – 281 kHz
Usable sensitivity	30 μV (S/N: 20 dB)
Signal-to-noise ratio	65 dB (IEC-A network)



PIONEER CORPORATION
4-1, MEGURO 1-CHOME, MEGURO-KU, TOKYO 153-8654, JAPAN

PIONEER ELECTRONICS (USA) INC.
P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

PIONEER EUROPE NV
Haven 1087, Keitberglaan 1, B-9120 Melsele, Belgium
TEL: (0) 3570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.
253 Alexandra Road, #04-01, Singapore 159936
TEL: 65-6472-7555

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.
178-184 Boundary Road, Braeside, Victoria 3195, Australia
TEL: (03) 9586-6300

PIONEER ELECTRONICS OF CANADA, INC.
300 Allstate Parkway, Markham, Ontario L3R 0P2, Canada
TEL: 1-877-283-5901

PIONEER ELECTRONICS DE MEXICO, S.A. de C.V.
Bvd. Manuel Avila Camacho 138 10 piso
Col. Lomas de Chapultepec, Mexico, D.F. 11000
TEL: 55-9178-4270

先鋒股份有限公司
總公司：台北市中山北路二段44號13樓
電話：(02) 2521-3588

先鋒電子（香港）有限公司
香港九龍尖沙咀海港城世界商業中心9樓901-6室
電話：(0852) 2848-6488

Published by Pioneer Corporation.
Copyright © 2005 by Pioneer Corporation.

Printed in Belgium
MAN-DEH-P580MP-GB

